



This **Quick Start Guide** explains how to use the main DZM functions. Your DZM Operation Manual provides more comprehensive configuration and usage instructions.

### ❶ Switching the DZM on and off

**If the 'Auto Power On' feature is enabled:** The DZM will automatically switch on when aircraft power is turned on and switch off when aircraft power is turned off.

**If the 'Auto Power On' feature is disabled:**

- > To switch on, press and hold the POWER key until the display lights up.
- > To switch off, press and hold the POWER key until the progress bar reaches the end and the display goes blank.



### ❷ Making a voice call on the Iridium satellite network

**To dial a call manually:**

- > Press DIAL SAT.
- > Enter the number to be dialed: press and hold the 0 key for the international dialing prefix +, followed by country code, area code and number.
- > Press ENTER/CONNECT.



**To call using DZM Quick Dial keys:** The Quick Dial function enables you to call the first nine numbers saved in the DZM phonebook.

- > Press SPD SAT.
- > Press the 1-9 keys for the number required or 0 for the last dialed number.
- > Press ENTER/CONNECT.



**To call a number stored in the DZM phonebook:**

- > Press MENU.
- > Use the DOWN arrow key to scroll to the phonebook option. Press ENTER to select and open the phonebook directory.
- > Use the UP and DOWN arrow keys to scroll to the number to be called. Press ENTER to select.
- > Select DIAL VIA SAT. Press ENTER to connect.



**To end a call:** Press CANCEL.

**Using touch-tone (DTMF) dialing during a call:**

- > When the display shows "Press Enter for DTMF", press ENTER.
- > Press the 0-9 keys as required, press CANCEL for \* or press and hold CANCEL for #.
- > Press ENTER to exit DTMF mode.





### 3 Answering an incoming a voice call

Your headset rings and the DZM display flashes when an incoming call is received.

**To answer a call:** Press ENTER.

**To reject or end a call:** Press CANCEL.



### 4 Sending position reports and alerts

**To send a manual position report (Point of Interest):** Press MARK to send current GPS position.

**To send an alert report indicating you may need support:** Press and hold ALERT for 1.5 seconds. When the DZM display flashes "Alert Mode", Alert reports are sent at pre-programmed intervals.

**To send distress reports:** Press and hold DISTRESS key for 1.5 seconds. When the DZM display flashes "Distress Mode", distress reports are sent at pre-programmed intervals.

**To cancel alert or distress reports:** Press and hold ALERT or DISTRESS for 1.5 seconds until the display no longer flashes.



### 5 Reading an incoming text message

The DZM display flashes and displays the message.

Press CANCEL to close the message.

**To read a stored message:**

- > Press MENU and use the DOWN arrow key to scroll to "Received Messages".
- > Press ENTER to open the list of messages.
- > Use the UP and DOWN arrow keys to scroll to the required message. Press ENTER to open the selected message.

**To exit the message screen:** Press CANCEL.



### 6 Isolating (muting) a phone call

Isolation prevents audio output to the phone and reduces incoming audio volume.

**To isolate a phone call:** Press and hold ISO PH. The display will show "Cell/Sat Isolated".

**To cancel isolation:** Press and hold ISO PH until the display no longer shows "Sat Isolated".



### 7 Muting auxiliary audio

**To mute auxiliary audio input (such as music):** Press AUX MUTE. The display will show "Auxiliary Input Muted".

**To cancel mute:** Press AUX MUTE again.

